


No onsite welding instructions

Tools required:

- 5.2mm Drill
- 6mm Drill tap or Hand tap

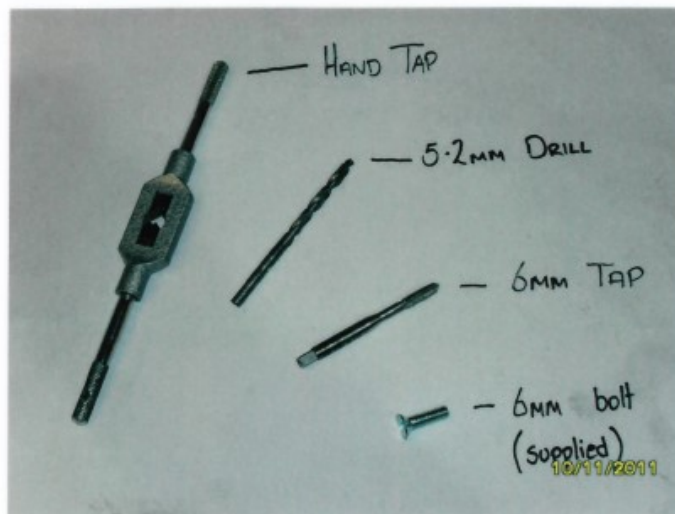

1. Place your balustrade section or spiral handrail against your newel post and mark through the counter sunk hole in the bracket on the end of the handrails.
2. Drill into the newel post with your 5.2mm drill
3. Run the 6mm tap through the drilled hole – you do not need to go any further than the shank.
4. Connect the handrail to the newel using a 6mm bolt (supplied by CCS)
5. Fill the holes in the same way as the counter sunk holes on the handrail
6. Rub down to make smooth and touch up.



British Spirals & Castings

Peak Building, Eccles Rd, Chapel-en-le-Frith, High Peak, SK23 9RG

T +44(0)1663 750716 **E** sales@britishsc.co.uk **www.britishsc.co.uk**

A trading division of Harding Sales Ltd. Registered Office: Peak Building, Eccles Road,
Chapel-en-le-Frith, High Peak, SK23 9RG. Company Registration Number: 7550371

A FOUNDING MEMBER OF
The Spiral Manufacturers Association